




50 **Wiring, Negative Ground Car**

51

Fig 2

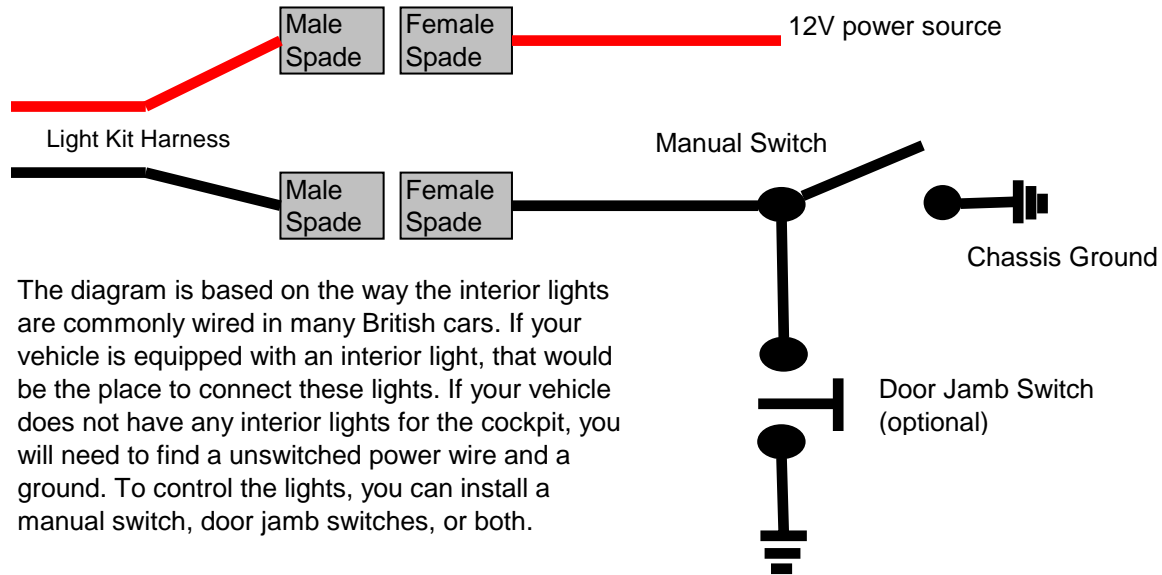


The diagram is based on the way the interior lights are commonly wired in many British cars. If your vehicle is equipped with an interior light, that would be the place to connect these lights. If your vehicle does not have any interior lights for the cockpit, you will need to find a unswitched power wire and a ground. To control the lights, you can install a manual switch, door jamb switches, or both.

52

53 **Wiring, Positive Ground Car**

Fig 3

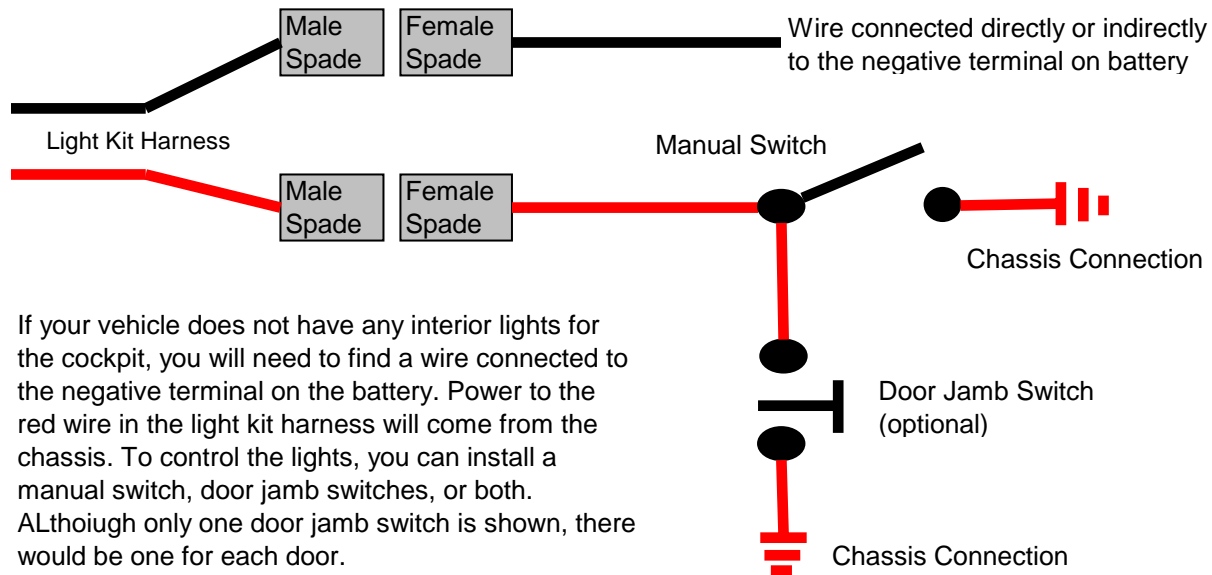

If your vehicle does not have any interior lights for the cockpit, you will need to find a wire connected to the negative terminal on the battery. Power to the red wire in the light kit harness will come from the chassis. To control the lights, you can install a manual switch, door jamb switches, or both. Although only one door jamb switch is shown, there would be one for each door.

54

55


56 **What About the Switches?**

57 While generic switches are readily available at your  
58 local auto parts store, we do have some switches that  
59 may be mores suitable in a vintage British application.  
60

61 (4a) 141-210 Toggle switch, on-off.  
62

63 *Suitable for mounting through the dash, or on a*  
64 *fabricated bracket attached to the underside of the*  
65 *dash.*  
66

67 (4b) 131-611 Door Jamb Switch (order 2)

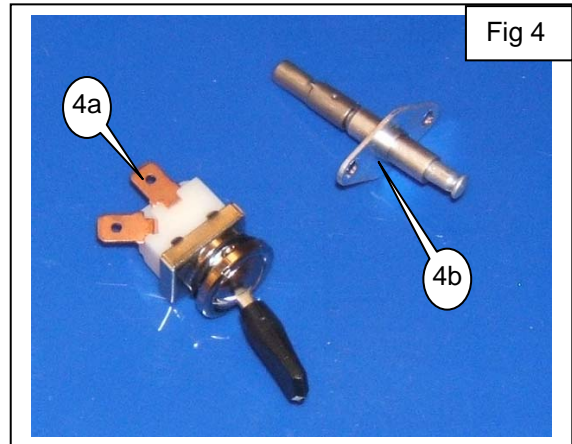



68 **Mounting the Lights**

69 The kit comes with 4 tie-wraps to secure the wiring. (Fig 5)

70 There are 4 screws, two for each lamp.


71 There is also a piece of double sided adhesive which can be used  
72 instead of the screws.  
73

74 To use the screws, the lamp assembly needs to be separated from  
75 the base by pressing on the back of the lamp assembly with your  
76 thumbs (Fig 6, 7, 8)  
77

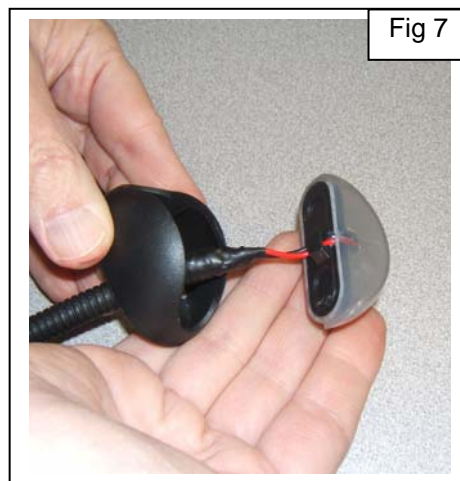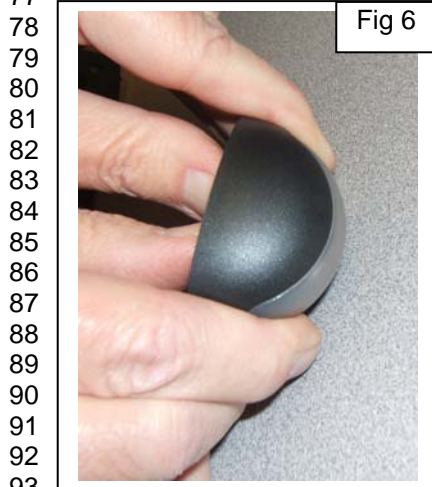

100  
101  
102  
103  
104  
105  
106  
107

## Changing the Fuse

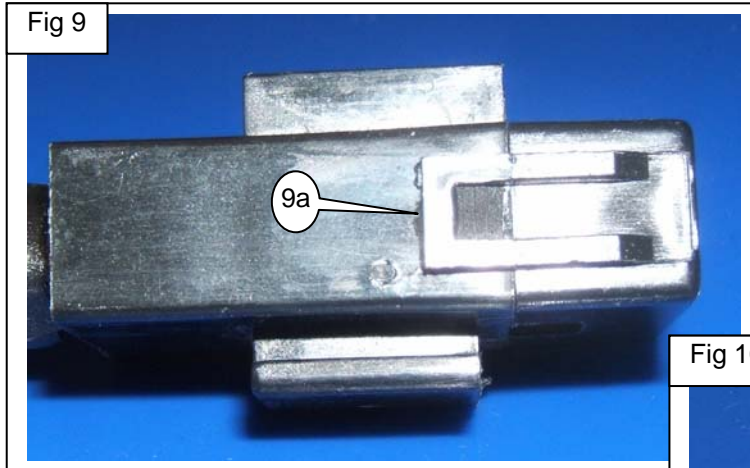

The fuse holder has a hinged cover that is latched on one side (9a). Pry up the edge of the latch and the cover will be free to swing out of the way.

126 Once the cover is out of the way, you can grasp the fuse

127 with your fingers and pull it out.

128

129

130

131

132

133

134

135

136

137

138


139

140

141

142

143

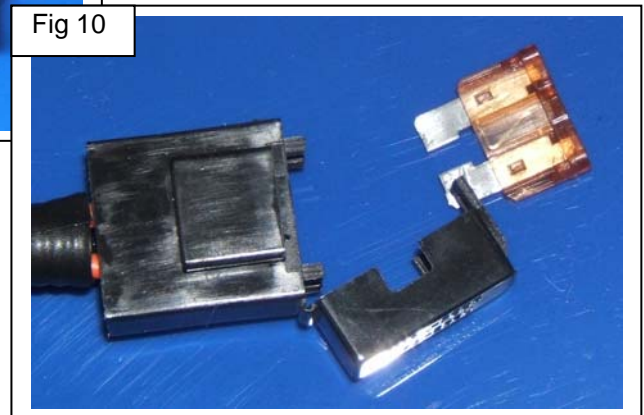

*Although every effort has been made to ensure the accuracy and clarity of this information, errors and/or omissions on our part are almost inevitable. Any suggestions that you may have that will improve the information (especially detailed installation notes) are welcome. Please use the simple email form on the "Contact Us" page on the Moss website: <http://www.mossmotors.com/AboutMoss/ContactUs.aspx> If you prefer, you may call our Technical Services Department at 805-681-3411. So many people call us for help that we are often not able to answer the calls as fast as we'd like, and you may be asked to leave a message. We apologize in advance for the inconvenience. We will get back to you within 2 business days.*

*If you provide detailed digital photographs and installation notes, we may (with your permission) incorporate them into this document for the benefit of other enthusiasts. You can receive credit by name, or you may remain anonymous if you prefer.*



**Moss Motors, Ltd.**

440 Rutherford Street, Goleta, California 93117

In the US & Canada Toll Free (800) 667-7872 FAX (805) 692-2510 (805) 681-3400

**Moss Europe Ltd.**

Hampton Farm Industrial Estate, Hampton Road West, Hanworth Middlesex, TW13 6DB

In the UK: 020-8867-2020 FAX:- 020-8867-2030